

115 ポインティングデバイス

100 携帯電話

Fig. 1(b)

111 アンテナ

111 アンテナ

112 スピーカー

110 本体部

113 補助表示部

116 応答ボタン

114 入力部

122 マイク

130 ヒンジ部

121 表示面

120 主画面表示部

100

Fig. 1(a)

111 アンテナ

112 スピーカー

116 応答ボタン

100

122 マイク

Fig. 1(c)

Fig. 2
(a)

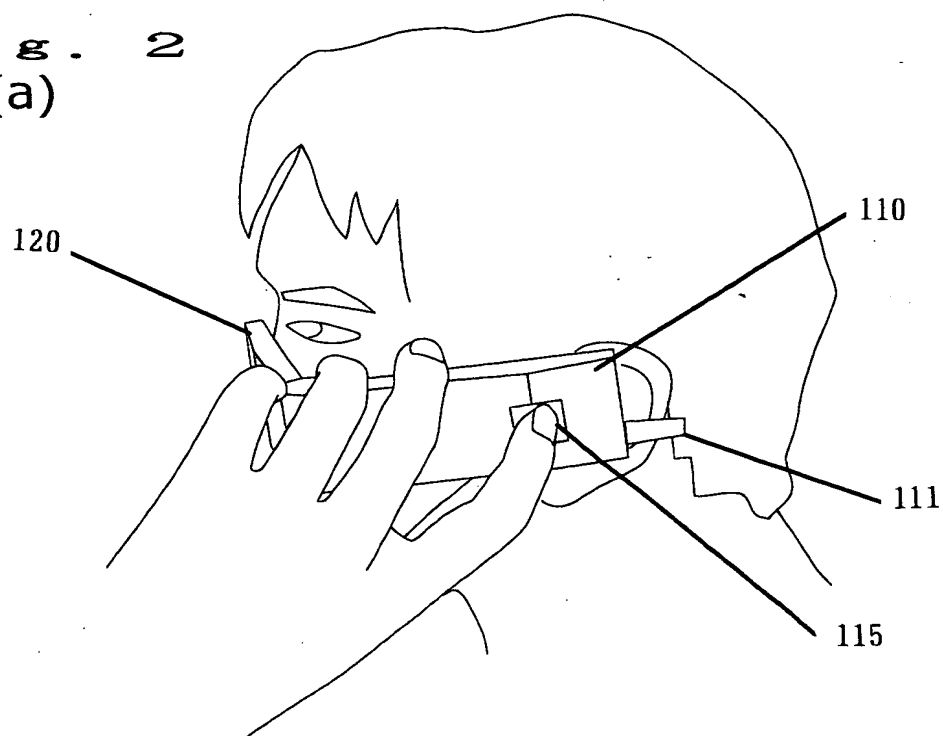
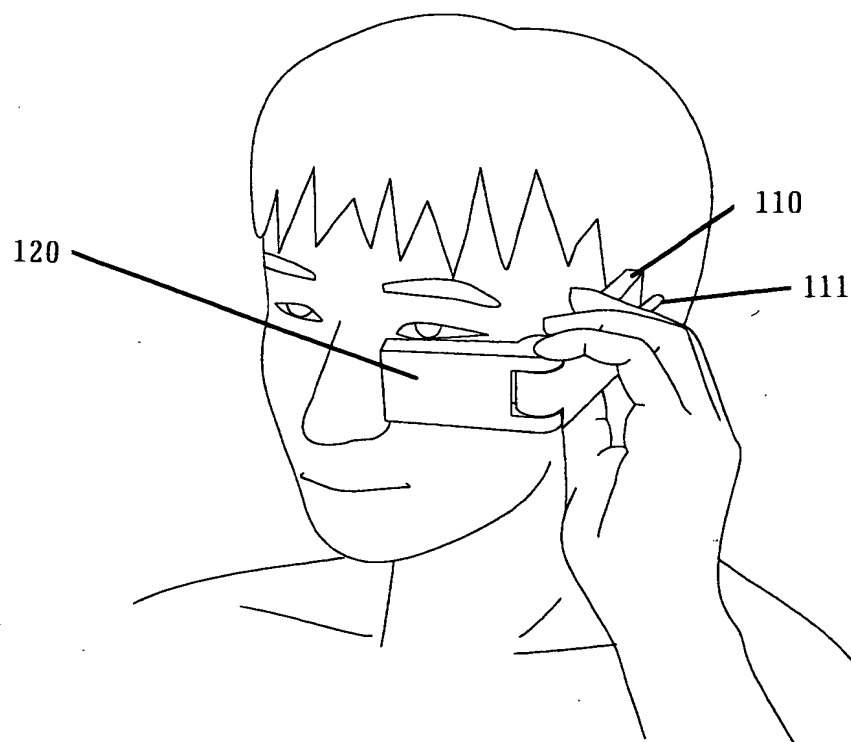 


Fig. 2
(b)

 

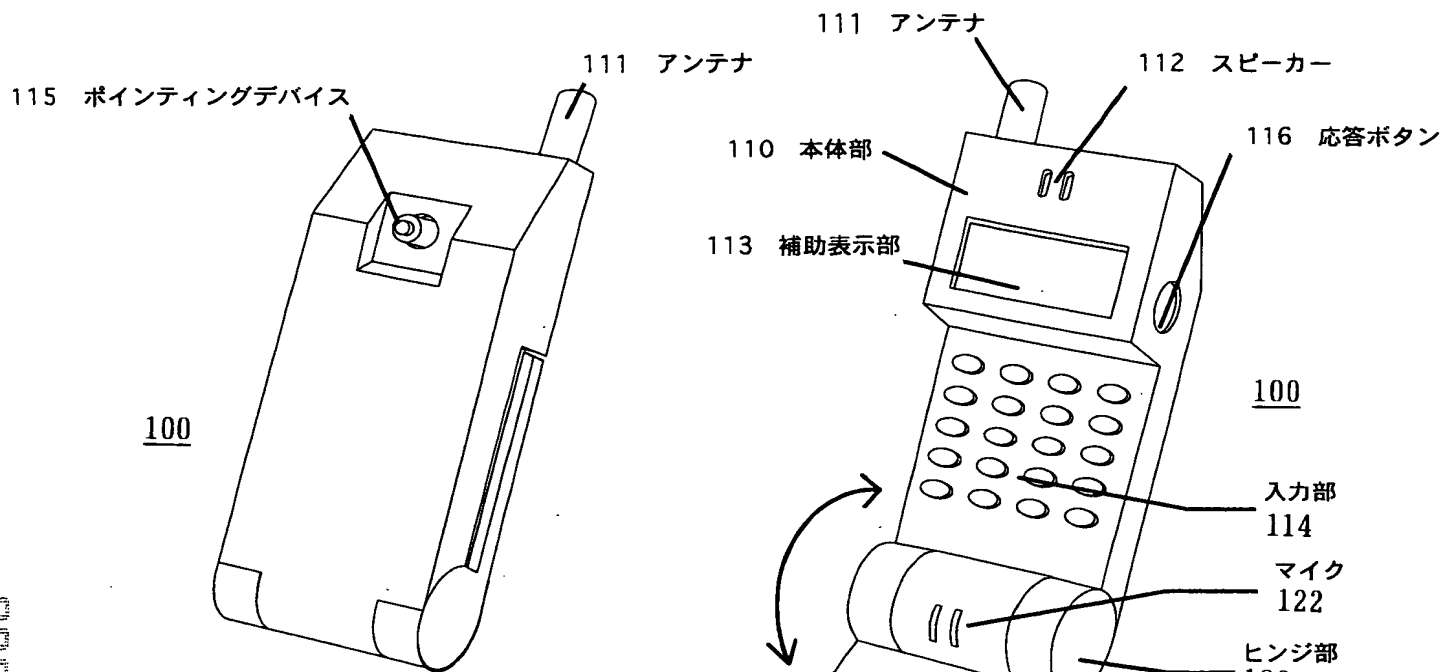 


Fig. 3(b)

Fig. 3(a)

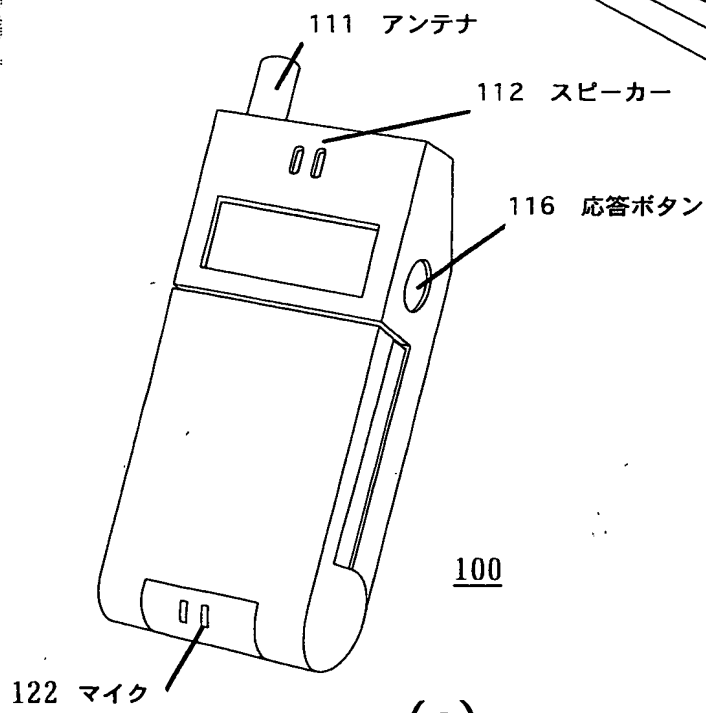 


Fig. 3(c)

Fig. 4(a)

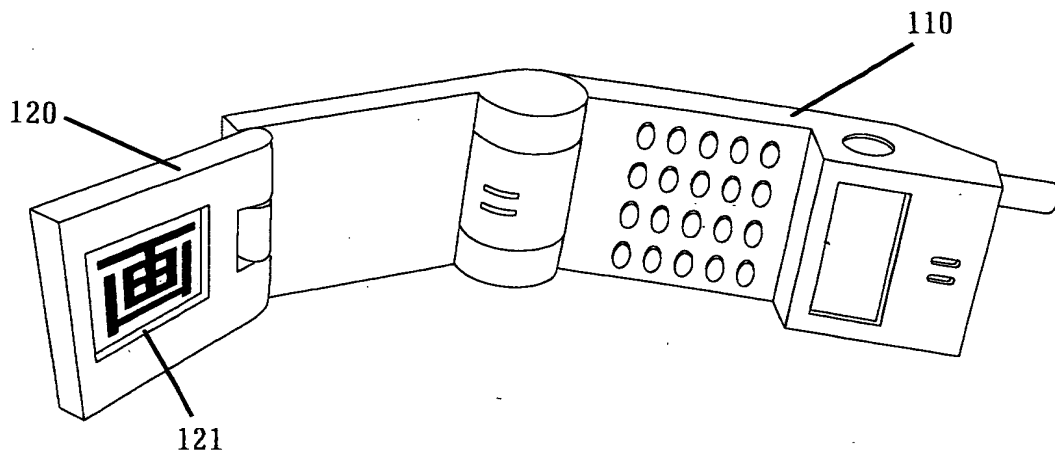 


Fig. 4(b)



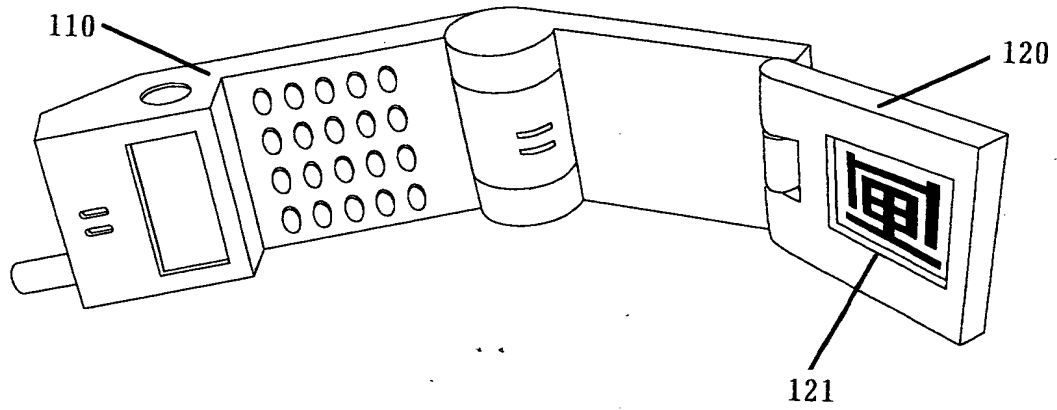 



Fig. 4(c)

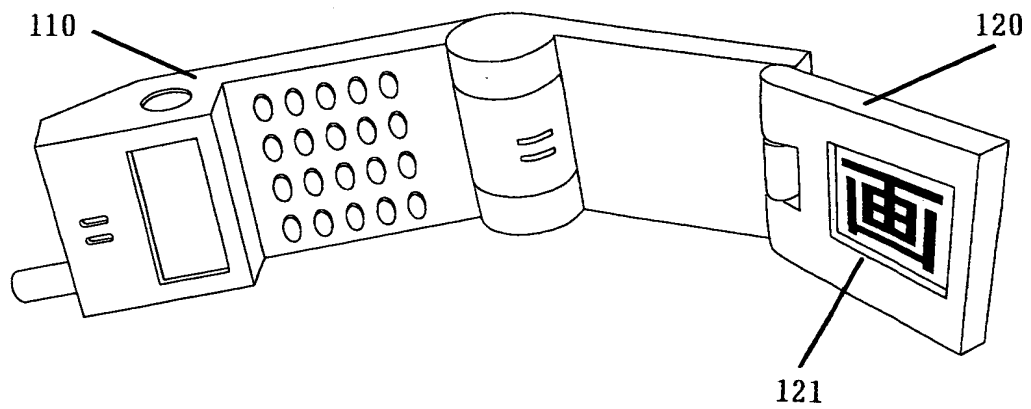 


F i g . 5

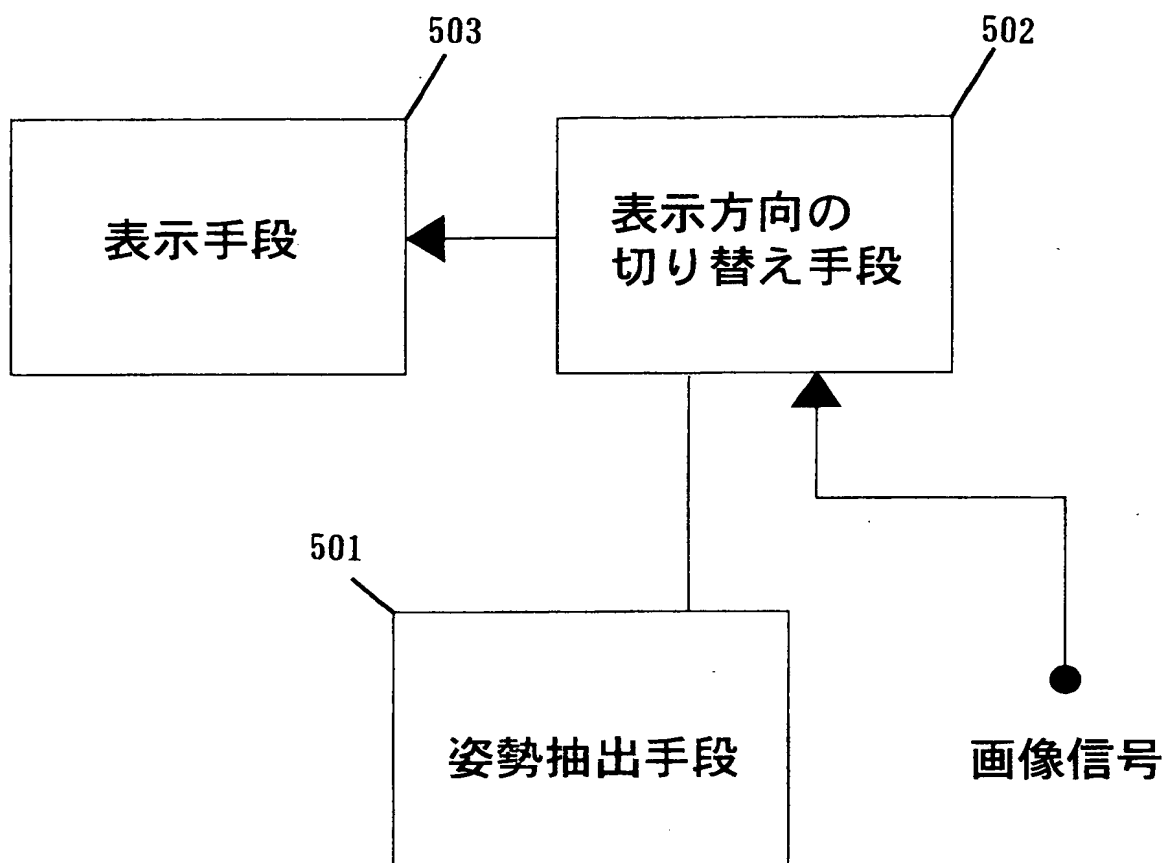 


F i g . 6 (a)

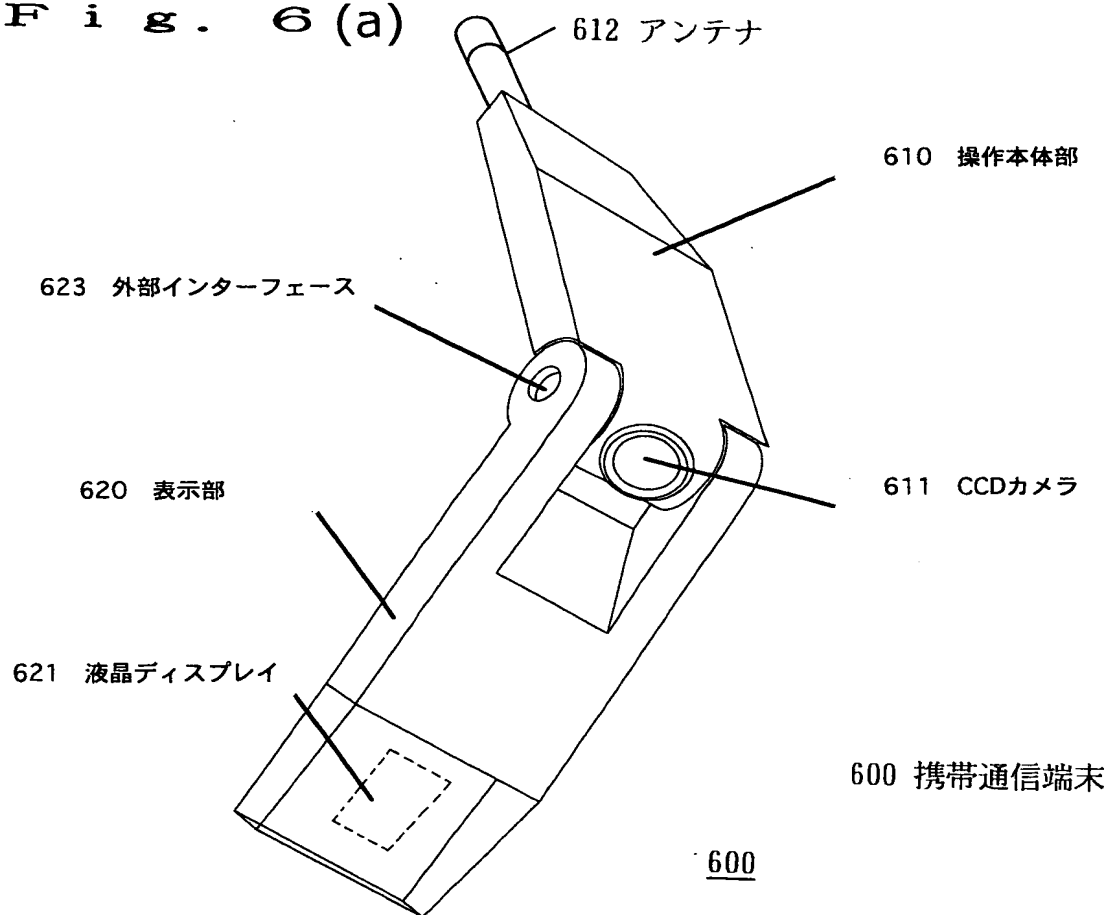 

F i g . 6 (b)

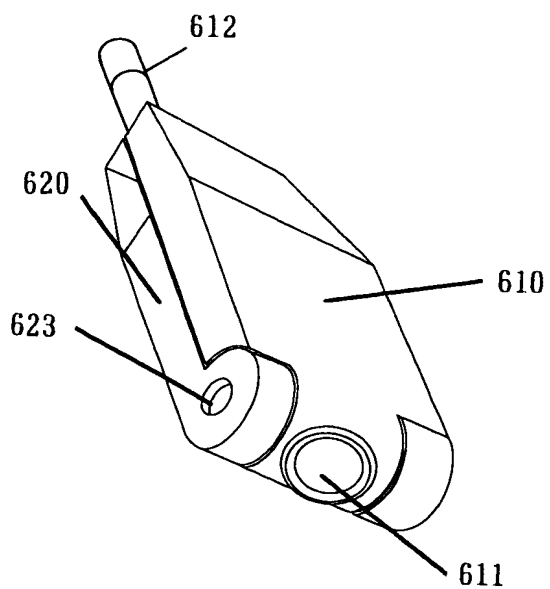 

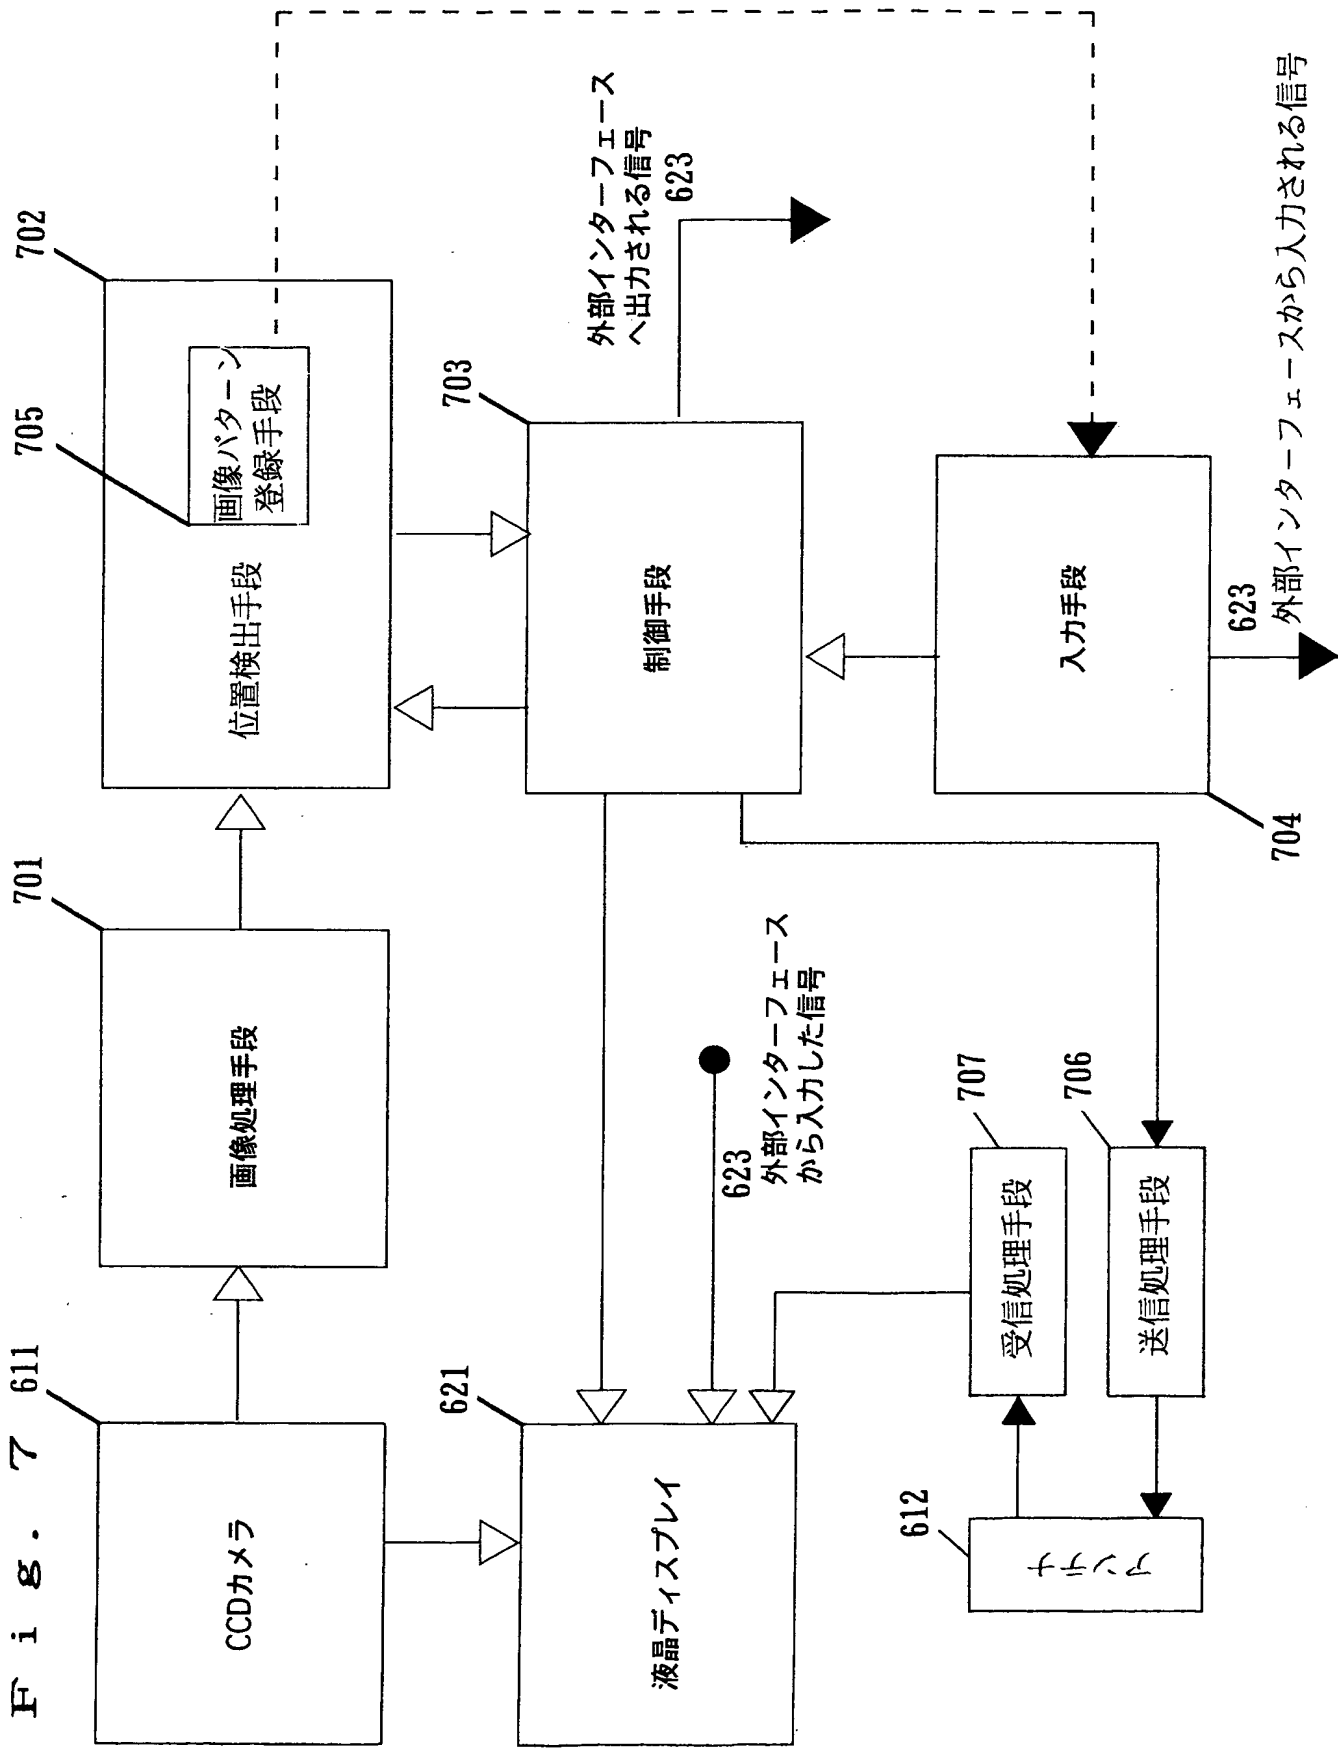 

F i g . 8

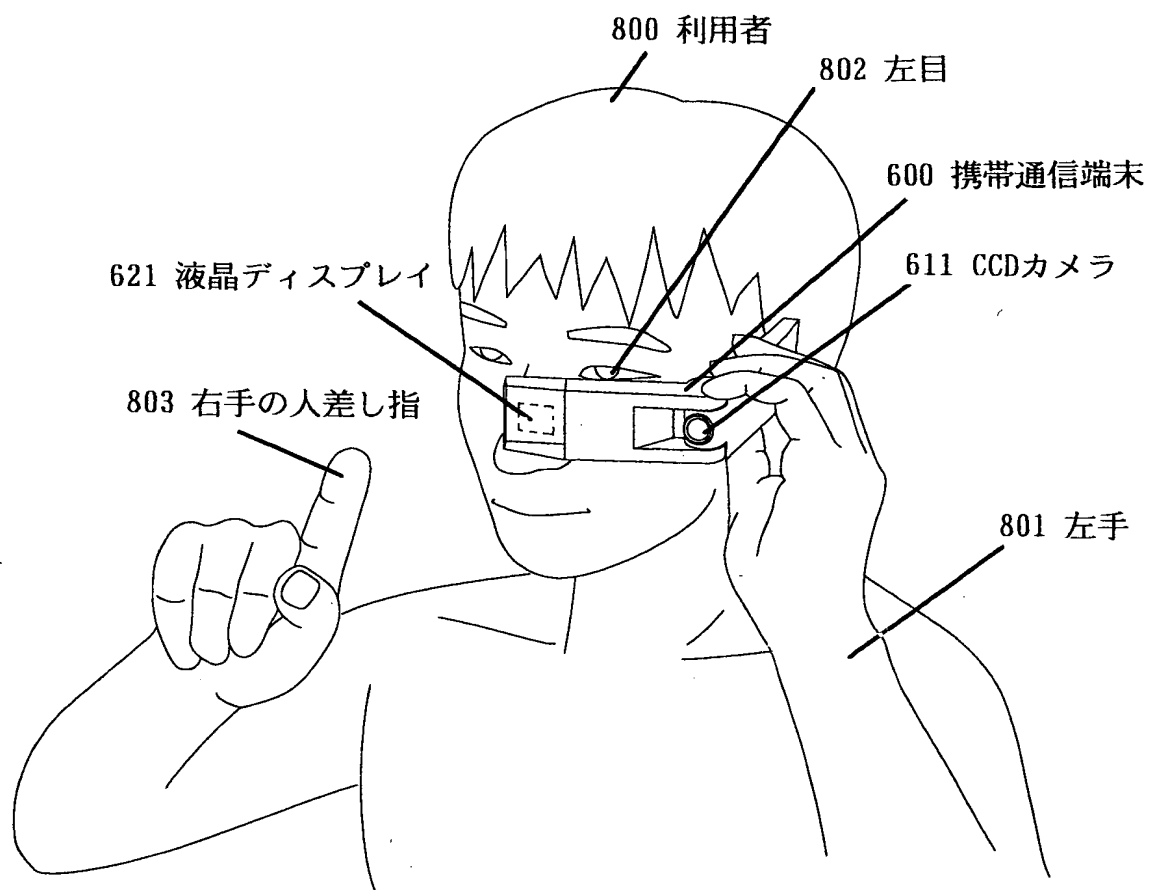 


Fig. 9(a)

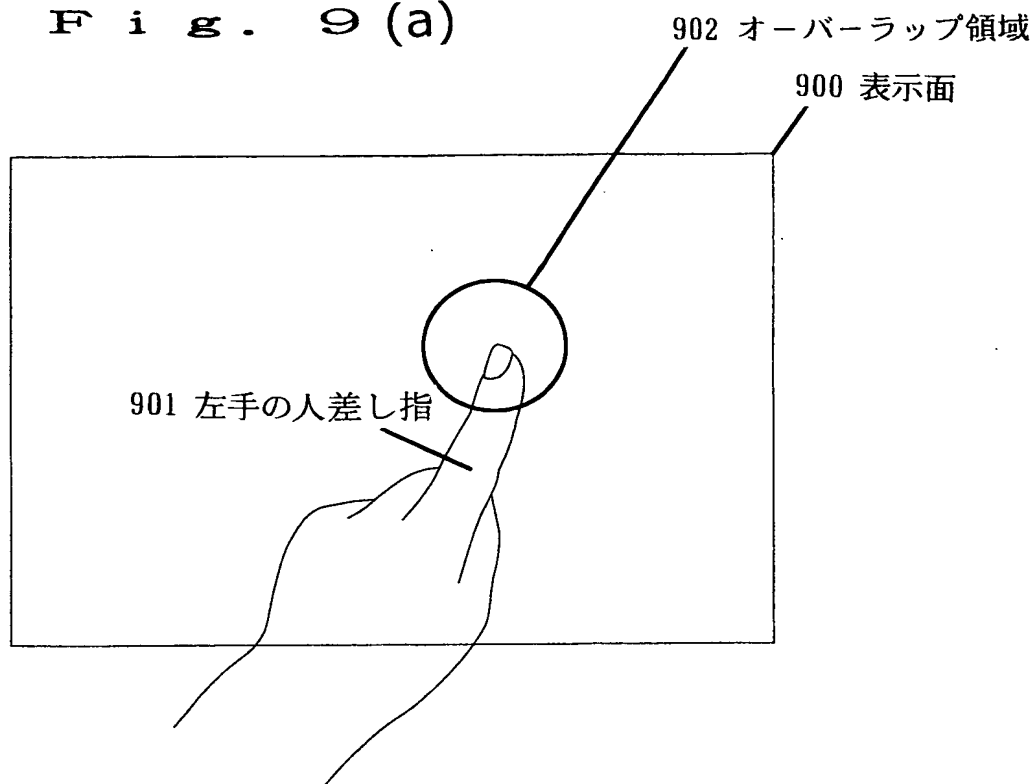
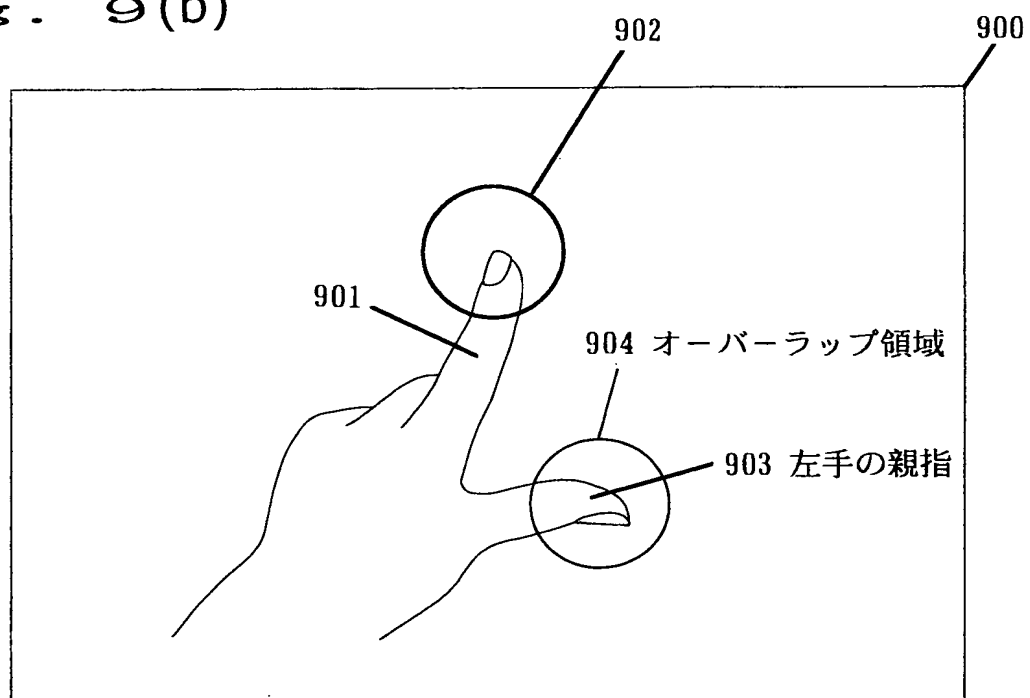 


Fig. 9(b)

 

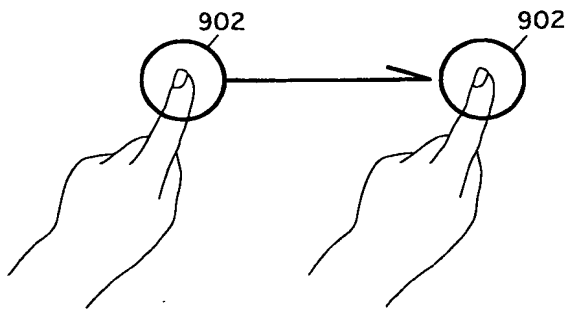 


Fig. 10
(a)

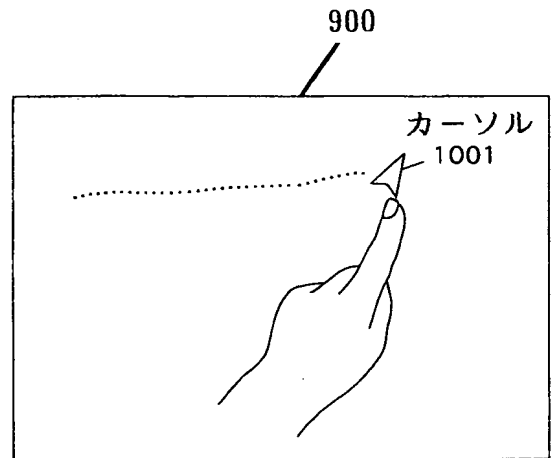 


Fig. 10
(b)

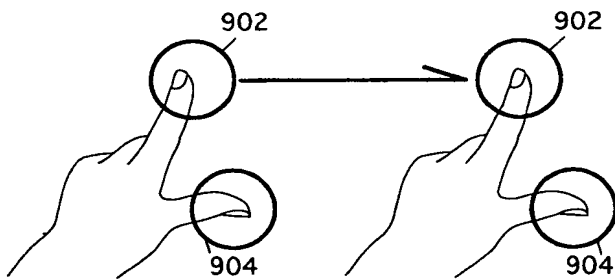 


Fig. 10
(c)


 
 
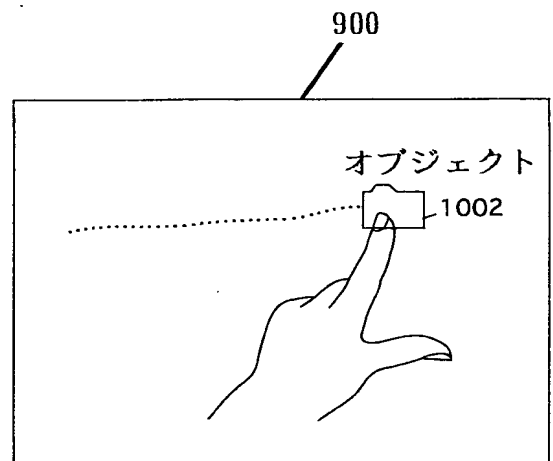 




Fig. 10
(d)

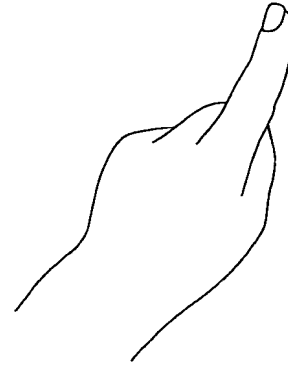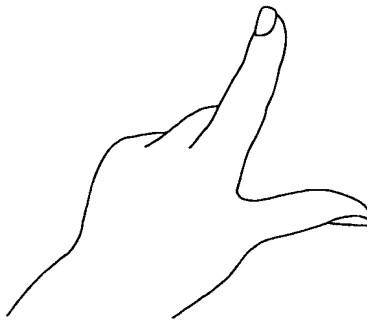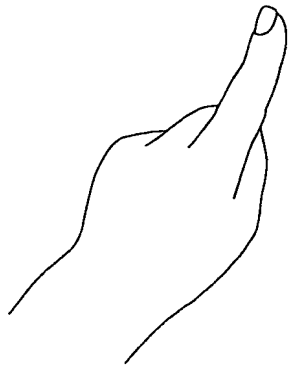 

F i g . 1 1
(a)

(b)
Fig. 11

  F i g . 1.1
(c)

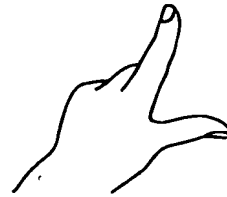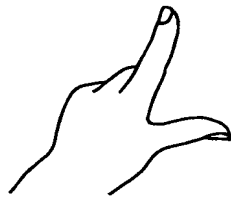

F i g . 1 2
(a)

(b)

 
F i g . 1 2
(c)

(d)


F i g . 1 2
(e)

F i g . 1 2


F i g . 1 2

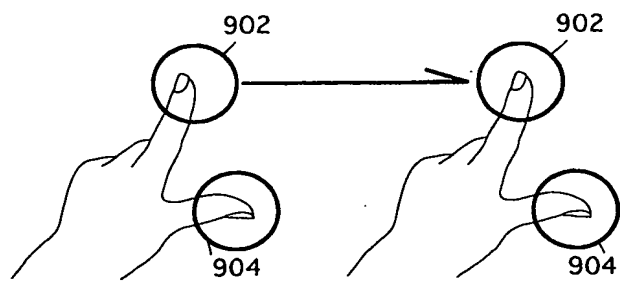


F i g . 1 3
(a)

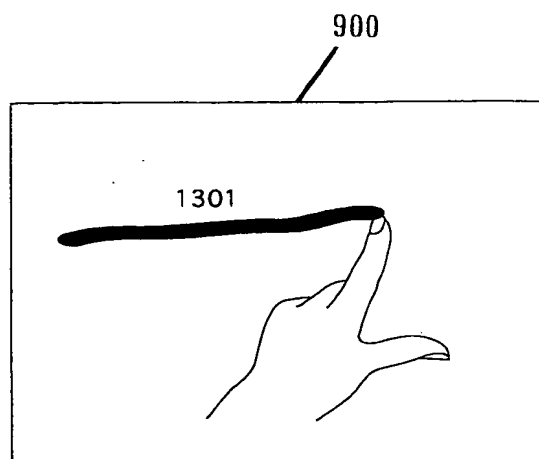 


F i g . 1 3
(b)

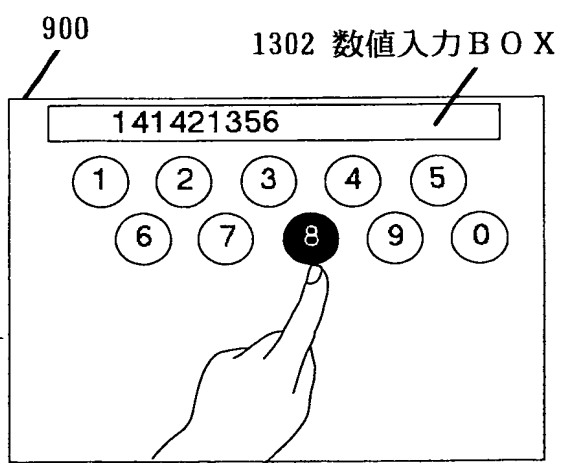 


F i g . 1 3
(c)

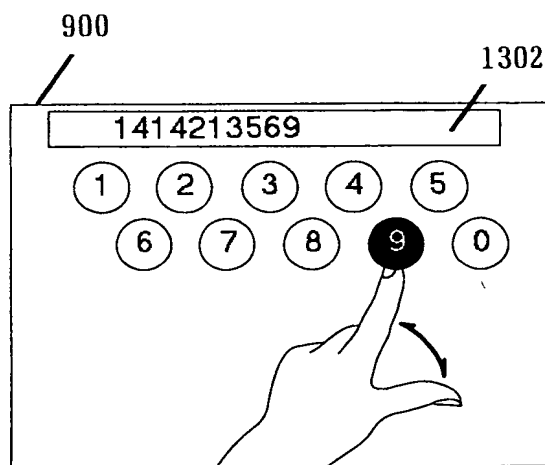 


F i g . 1 3
(d)

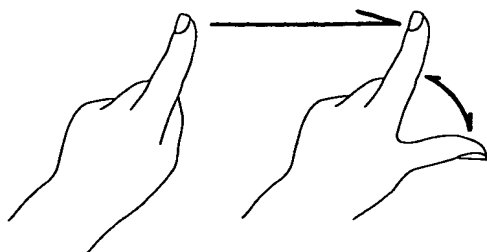 

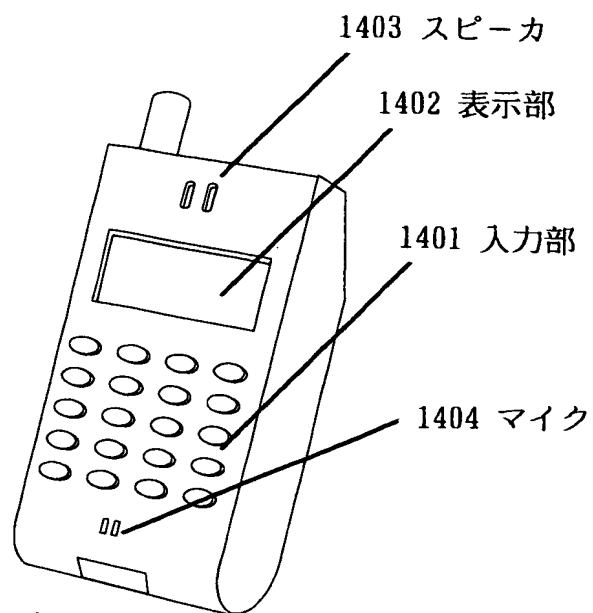 

F i g . 1 4
(a)

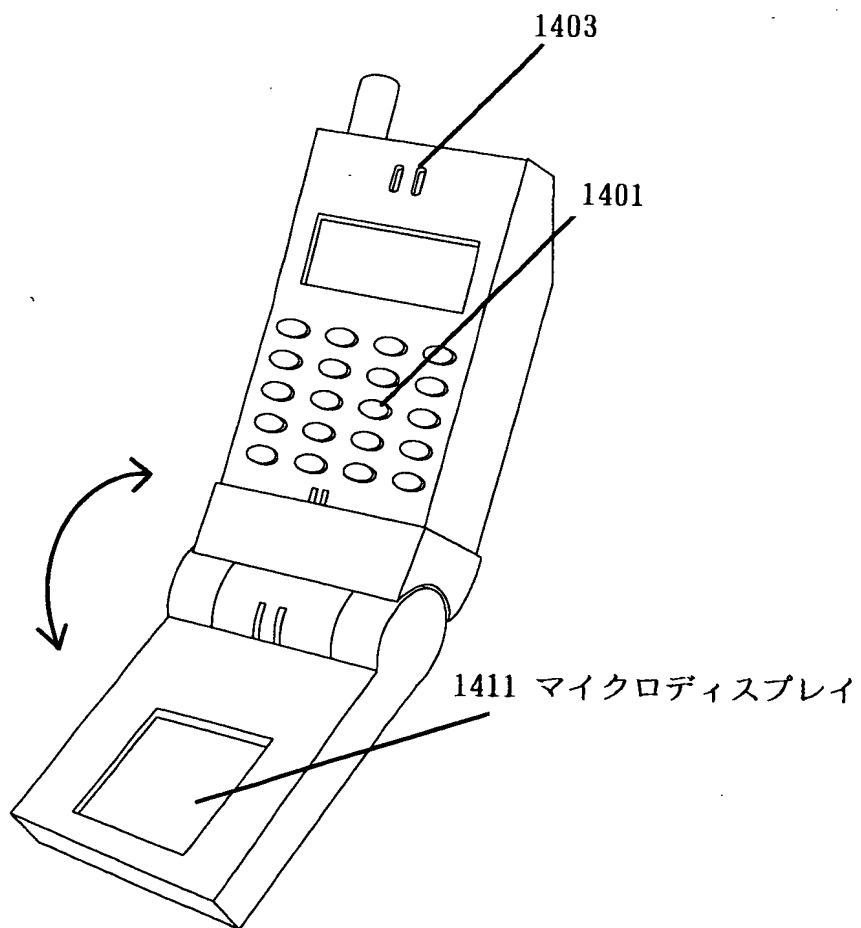 

F i g . 1 4
(b)

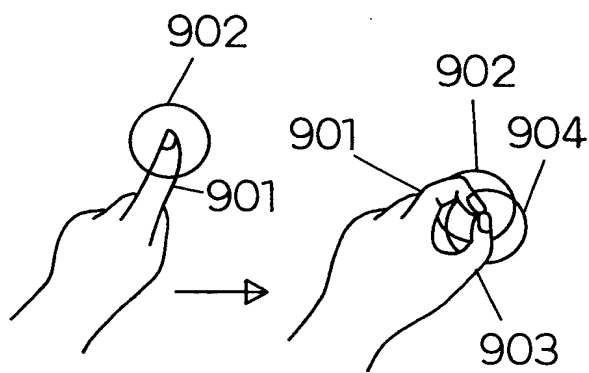 


Fig. 15
(a)

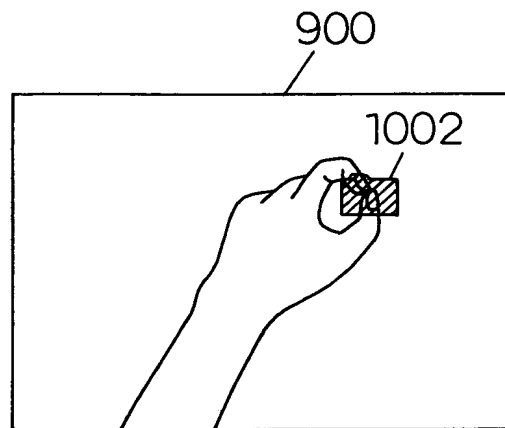 


Fig. 15
(b)

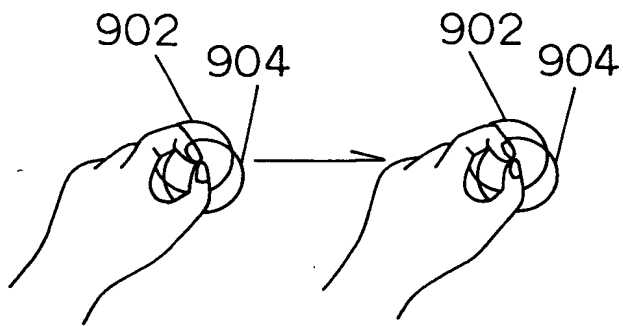 


Fig. 15
(c)

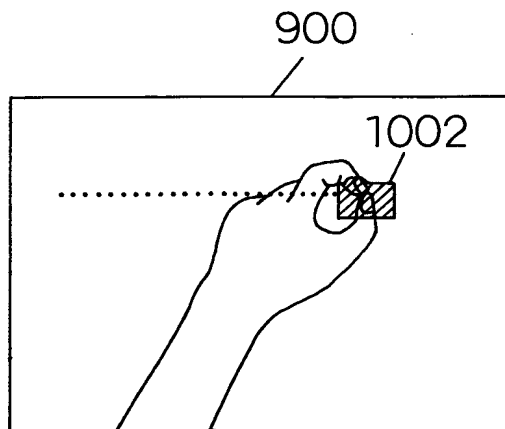 


Fig. 15
(d)

Fig. 16
(a)

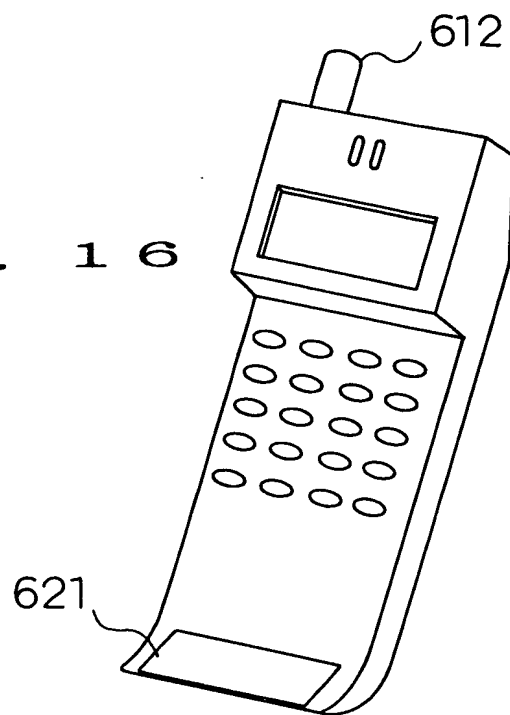 


Fig. 16
(b)

